

INSTRUCTION MANUAL


Water Dispenser HWD-B30000

Thank you for purchasing Hitachi Water Dispenser. Please read this operating instruction manual carefully before using it.

After reading, please keep this manual and read it again when necessary.

CONTENTS

■ Warning and Caution on Safety and Operation	2
■ Name of Main Parts	4
■ How to Set Up	4
■ How to Operate.....	5
■ How to Change Bottle.....	6
■ Maintenance.....	7
■ Trouble shooting.....	7
■ Specification	9
■ Machine Installation	9

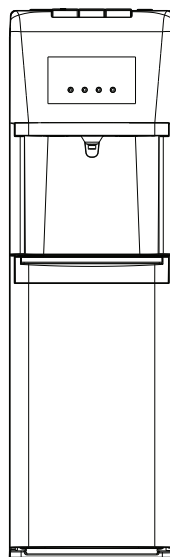

T


- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices, other working environments, farm houses and by clients in hotels, motels, other residential type environments, bed and breakfast type environments, catering and similar non-retail applications.
- Please use this product properly, improper usage may cause serious accidents.
- In case of emergency such as fire or earthquake, please stop using and unplug immediately.

Warning and Caution on Safety and Operation


Before using this product, please read these warnings and cautions on safety and operation carefully for proper use and to prevent any injury to yourself or others:

Warning:


1. Never modify the product, repair or disassemble by yourself. Repair or disassembly must be carried out by an authorized repair person(s) only.

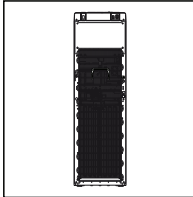

2. Place this product on a flat floor that is strong enough to support when it is fully loaded.
3. Never turn this product upside-down or tilt it more than 45°.

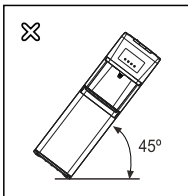

4. Keep dry, place this product away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Do not place the product in an area where the temperature may fall below freezing.

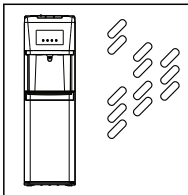

5. Keep the area around the product free of dust and dirt.
6. Never put anything flammable beside the product, and near the product, do not use materials such as organic liquid which generate flammable gas.
7. Never clean the product with flammable fluids.
8. Do not use the product if the power cord and or plug are damaged or if the power socket is loose. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. Insert the plug firmly, clean dirt and dust on the plug regularly.
10. When cleaning, the plug must be removed from the power socket. Do not insert and remove the plug with wet hands.
11. Do not get product wet. Using water to splash it is strictly prohibited.
12. Do not get on the product and do not put anything on the product.
13. Do not put your finger(s) or any stick into the back guard.
14. Stop using it immediately when you find cracks or breakage on the product. Consult with your shop.
15. Children should be supervised to ensure that they do not play with the product.
This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
16. The product is not intended for use by persons (including children) with reduced physical,


sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

17. If water leakage happens, please stop using and unplug the product immediately.
18. Do not insert the power plug into the power socket before the set-up is completed.
19. The product heats water to a temperature of approximately 85°C, it can cause a severe scald, Please operate it carefully.
20. This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
21. The appliance must not be cleaned by a water jet.
22. The appliance is suitable for indoor use only.
23. WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
24. WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
25. WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
26. This appliance is not suitable for installation in an area where a water jet could be used.
27. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
28. The instructions for appliances normally cleaned after use and not intended to be immersed in water for cleaning, state that the appliances must not be immersed.




Caution:

1. Do not damage, modify, forcibly bend, pull hard, twist, or bind the power cord. Do not place heavy objects on the cord or pinch the cord, or heating the cord.
2. When removing the plug, do not grab the cord, make sure to take hold of the plug to pull out.

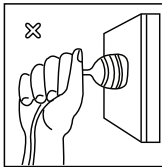

3. Rearward of the product should be at least 25cm far away from the wall, which allows for proper air circulation to cool the compressor.
4. Be careful when hot water comes out! Do not discharge the hot water toward hands.
5. In case of no water from the faucet, please push any button to exhaust air inside inner tubes.
6. Use for drinking water only! Never put any other liquid into the bottle. Please do not use unclean or hard water.
7. To use the product safely and cleanly, please:
 - 1) Run some amount of water off before starting to drink on each day.
 - 2) When you do not use the product for a long time, make sure of no water left inside and unplug the power cord.
 - 3) Keep the product clean by using a clean cloth to wipe off faucet.
 - 4) Use up the water of bottle as early as possible to enjoy the fresh water.
8. When a new bottle is installed you must push the hot water button and remove no less than 4 full cups of water.
9. Ensure that the water bottle is fully empty before replacing with a new bottle.
10. When using the product after set-up or move, please do not operate until the refrigerant is stable. (It will take approximately one hour)
11. Do not turn on the cooling/heating switches in case of no water left inside (when installing a new bottle or cleaning the inside) Otherwise, may cause dry-heating. Turn on the switch after the tank is filled with water.
12. When use of the product, please make sure to close the cabinet door.

Name of Main Parts

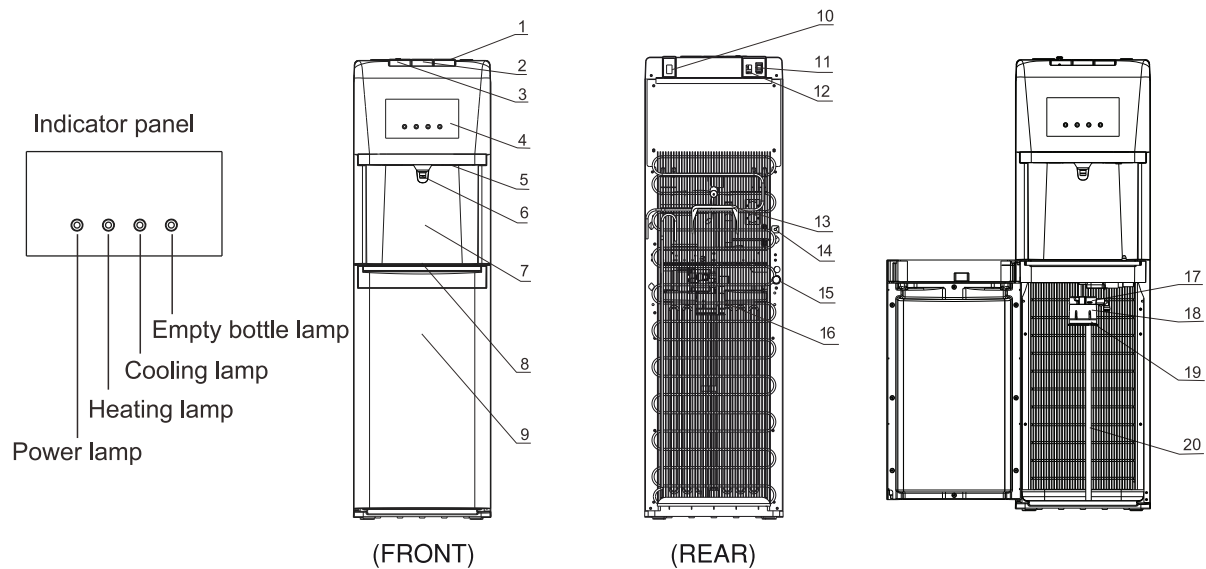

No.	PART NAME	No.	PART NAME
1	push button of cold water	11	heating switch
2	push button of normal water	12	cooling switch
3	push button of hot water	13	handle
4	indicator panel	14	power cord
5	LED night light	15	hot water drain valve
6	faucet	16	condenser
7	front carapace	17	probe assembly
8	water drip tray	18	collar
9	cabinet door	19	rubber band
10	LED night light switch	20	pipe

Note:

The water dispenser can be suitable for the bottle of 3 or 5 gallons. Please buy the water bottles on your market. *Do not use unclean or hard water.

How to Set Up

1. Set up the Product

- 1) Remove the exterior and interior packing
- 2) Place this product on a flat floor that is strong enough to support when it is fully loaded.
- 3) The water dispenser should work under environment of temp. from 18°C~43°C, relative humidity not higher than 90%.

Warning:

- 1) Never turn this product upside-down or tilt it more than 45° .
- 2) Keep dry, place this product away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Do not place the product in an area where the temperature may fall below freezing.



Caution:

Rearward of the product should be at least 25cm far away from the wall, which allows for proper air circulation to cool the compressor.

2. Set up the Bottle

The water dispenser can be suitable for the bottle of 3 or 5 gallons, please buy the water bottles on your market. *Do not use unclean or hard water.

- 1) Place a fresh bottle outside of the cabinet.
- 2) Clean the outside of the bottle with a cloth.
- 3) Remove the entire plastic cap from the top of the bottle.
- 4) Open the cabinet door.
- 5) Put the probe assembly into the bottle.
- 6) Slide the rubber band up.
- 7) Slide the collar down until it clicks in place.
- 8) Slide the rubber band down to fasten the collar.
- 9) Push the head down until the pipe hits the bottom of the bottle.
- 10) Set the bottle into cabinet and close the cabinet door.

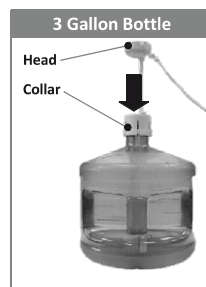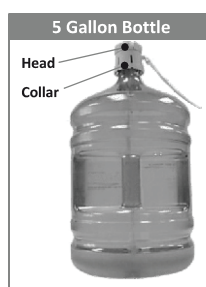

Caution:

- 1) Do not bend or damage the pipe and silicon hose.
- 2) Make sure to close the cabinet door.

How to Operate

1. Provide Electricity

- 1) Insert the power plug into the power socket. Each lamp will blink from left to right to make sure each lamp work properly.
- 2) After the operation check, the power lamp lights up and the empty bottle lamp flashes.
- 3) The pump starts to move water from the bottle to the hot and cold tanks. It will take up to 4 minutes to fill the tanks for the first time. During this period, the pump will run continuously. This is normal.
- 4) After water reached the tanks, the empty bottle lamp will automatically go off.

2. Active Heating & Cooling

- 1) Turn on the cooling switch (Green) on the back for cold water. Turn on the heating switch (Red) on the back for hot water. During cooling or heating, the cooling lamp (Green) or the heating lamp (Red) will light up.
- 2) Wait for the cold water to reach temperature in about 1 hour. Wait for the hot water to reach temperature in about 20 minutes. After water reached the temperature, the cooling lamp or the heating lamp will automatically go off.

Caution:

Do not turn on the cooling /heating switches in case of no water left inside (when installing a new bottle or cleaning the inside). Otherwise, may cause dry-heating. Turn on the switch after the tank is filled with water.

Note:

- 1) During cooling, you may hear a noise. This is the refrigerant moving sound and it is normal.
- 2) During the pump working, you may hear a noise. This is normal.
- 3) If over consumption of the water in short time, hot or cold water temperature might not reach the suitable temperature.
- 4) When water temperature is not suitable, cooling or heating lamp will light up again automatically to cool and heat the water.
- 5) Water temperature and ability
Hot water temperature: approximately 85°C (Temperature when come out from the faucet)
Hot water ability: 4L/hour ($\geq 85^{\circ}\text{C}$ water is available for 4L per hour)
Cold water temperature: approximately 10°C (Temperature when come out from the faucet)
Cold water ability: 2L/hour ($\leq 10^{\circ}\text{C}$ water is available for 2L per hour)
- 6) Water temperature depends on condition of measurement and usage.
- 7) The time for reaching the suitable temperature is a reference, it might change by the water in bottle or room temperature.

3. Drink Water

Hold a cup right under the faucet. Slide the child safety lock up then push the hot water button to get hot water. Push the cold or normal button to get cold or normal water.

Warning:

The product heats water to a temperature of approximately 85°C, it can cause a severe scald, Please operate it carefully.

Caution:

- 1) In case of no water from the faucet, please push any button to exhaust air inside inner tubes.
- 2) In case hot water or cold water is not needed for a long time, please turn off the heating or cooling switch accordingly to save power.
- 3) In case you do not use the product for a long time, turn off the switches and pull the plug out from the socket and drain the remaining water through the hot water drain valve.
- 4) The product should not be turned on until 3 minutes later after unplugging the product.
- 5) When the product is under the ice point and blocked by ice, the cooling switch must be closed for 4 hours before turning it on again to continue its operation.
- 6) Temperature has been set at the factory, please do not try to change the temperature setting by yourself.

4. LED night light

Turn on the LED night light switch if you need it.

How to Change Bottle

When the empty bottle lamp flashes or water does not flow out of the faucet well, replace the bottle as soon as possible.

- 1) Place a fresh bottle outside of the cabinet.
- 2) Clean the outside of the bottle with a cloth.
- 3) Remove the entire plastic cap from the top of the bottle.
- 4) Open the cabinet door.
- 5) Take the empty bottle out of the cabinet.
- 6) Remove the probe assembly from the empty bottle then put it into the new bottle.
- 7) Slide the rubber band up.
- 8) Slide the collar down until it clicks in place.
- 9) Slide the rubber band down to fasten the collar.
- 10) Push the head down until the pipe hits the bottom of the bottle.
- 11) Set the bottle into cabinet and close the cabinet door.
- 12) Make sure the empty bottle lamp is turned off.

Caution:

- 1) Do not dispense hot, normal or cold water if the empty bottle lamp is flashing as you could empty the tanks and cause the dispenser to overheat.
- 2) Do not bend or damage the pipe and silicon hose.
- 3) Make sure to close the cabinet door. If the door remains open, it may cause noise or the empty bottle lamp keeps flashing and the pump does not work.

Maintenance

1. Use a clean soft cloth to wipe off the faucet always. Do not get product wet. Using water to splash it is strictly prohibited.
2. If the water drip tray is filled with water, throw out the water.
3. The product has been disinfected at factory, to keep your product in best quality, we recommend you contact the retailer from which you bought or the service company for more maintenance.

Warning:

Never disassemble the product by yourself to avoid danger from damaged product.

Trouble Shooting

When you think that you have a trouble with your water dispenser,

Problems	Possible causes	Elimination
No hot or cold water flows out of the faucet.	1. Over consumption of hot or cold water in short time 2. No power supply 3. Air remains inside inner tubes. 4. The water supply line hasn't water 5. The ice blocks 6. Button is not pushed properly. 7. No water is left inside of the tank. (the empty bottle lamp is flashing)	1. Wait a while, then hot or cold water is available again. 2. Connect plug to socket. Turn on the heating or cooling switch. 3. Push any button to exhaust air inside inner tubes, 4. Check the water source to see if the supply equipment works normally. 5. Keep the cooling switch closed for 4 hours. 6. Push button properly. 7. Change the bottle to new one and wait until the empty bottle lamp goes off.

Hot water is not hot. Cold water is not cold.	1. Heating / Cooling time is not enough. 2. Air circulation is not good.(for cold water only)	1. It takes up to about 20 minutes for hot water/ about one hour for cooling water. After the water reached the suitable temperature, the lamps will automatically go off then take the water. 2. Keep the rearward of the product be at least 25cm far away from the wall.
Water does not flow out of the faucet well.	1. Water is not left enough inside of the tank. 2. Broken faucet	1. Change the bottle to new one and wait until the empty bottle lamp goes off. 2. Contact to the shop which you bought to replace a new faucet.
Water leaks from the faucet.	Broken faucet	Contact to the shop which you bought to replace a new faucet.
Noisy operation	1. Not installed properly. 2. The cabinet door remains open. 3. During cooling, you may hear a noise. This is the refrigerant moving sound and it is normal.	1. Place the product on flat & solid surface. 2. Make sure to close the cabinet door.
Empty bottle lamp keeps flashing	The bottle is empty.	Change the bottle to new one.
Heating / Cooling lamp do not light up.	1. Water temperature is already suitable. 2. Heating / Cooling switch is OFF.	1. The product is ready to use. 2. Turn on the heating / cooling switch.
LED night light does not light up.	1. No power supply. 2. LED night light switch is OFF.	1. Connect plug to socket. 2. Make sure to turn on the LED night light switch.
White or black object may come out with water from the faucets.	The object is mineral such as Ca, Na, Mg included in bottle water.	Even if drinking the object, it does not harm human health, but it would be better to clean the product regularly according to p.7 Maintenance.

Warning:

1. If problem still persist, please contact the retailer from which you bought or the service company without trying to repair it yourself.
2. Never disassemble the product by yourself to avoid danger from damaged product.

Specification



Rated Voltage	220V-240V~
Rated Frequency	50Hz/60Hz
Rated Power Consumption	520W
Heating power	420W
Cooling Current	1.0A
Refrigerant	R134a(32g)
Hot water temperature	$\geq 85^{\circ}\text{C}$ (Temperature when come out from the faucet)
Heating capacity	4L/h ($\geq 85^{\circ}\text{C}$ water is available for 4L per hour)
Cold water temperature	$\leq 10^{\circ}\text{C}$ (Temperature when come out from the faucet)
Cooling capacity	2L/h ($\leq 10^{\circ}\text{C}$ water is available for 2L per hour)
Suitable water bottle	3 or 5 gallons ※filtered drinking water only
Work environment	Temperature: $18^{\circ}\text{C} \sim 43^{\circ}\text{C}$ Relative humidity: $\leq 90\%$ Climate Class: T
Replacement cord instructions	type Y attachment
Dimensions (W×D×H)	310×360×1040mm
Weight	16.2Kg
Accessory	bracket

Machine Installation

To prevent the machine from swaying to fall, please install the bracket accordingly.

Instructions for installation:

1. Loosen the screw of the left or right bottom angle just as the pictures shown.
2. Use the screw to fix the bracket on the left or right bottom angle of the water dispenser.
3. Make a hole on the floor's (or the desk's) surface where the water dispenser will be installed, and put the sleeve in the hole.
4. Fix the bracket on the floor by screw tightly.
5. Tighten the screw.

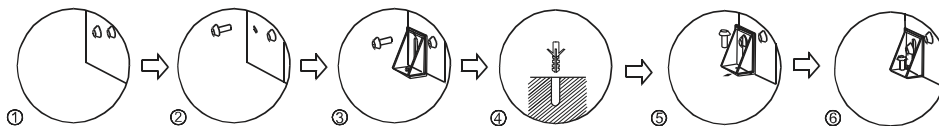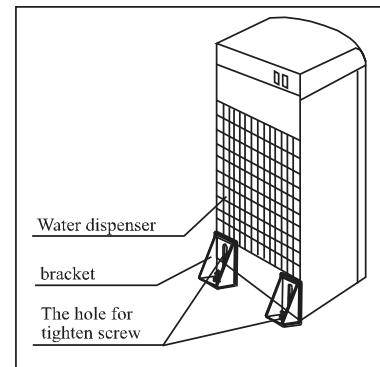

WARNING! To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

The packaging material used is recyclable; we recommend that you separate plastic, paper and cardboard and give them to recycling companies. To help preserve the environment, the refrigerant used in this product is R134a (Hydrofluorocarbon -HFC), which does not affect the ozone layer and has little impact on the greenhouse effect. According to WEEE (Waste of Electrical and Electronic Equipment) guidelines, waste from electrical and electronic devices should be collected separately. If you need to dispose of this appliance in the future, do NOT throw it away with the rest of your domestic garbage. Instead, please take the appliance to the nearest WEEE collection point, where available.



DISTRIBUTED : Arcelik Hitachi Home Appliances Sales (Thailand) Ltd.

ADDRESS : 333, 333/1-8 Moo 13 Bangna-Trad Road (km7),
Bangkaew, Bangplee, Samutprakarn 10540

Tel. 0-2335-5455 Fax : 0-2316-1126, 0-2316-1127

Website : (Thai) <https://www.hitachi-homeappliances.com/th-th/>

(Eng) <https://www.hitachi-homeappliances.com/th-eng/>

Email : service.h.ahst@arcelik-hitachi.com

LINE : @AH_THCARE

SELLING PRICE : HWD-B30000 7,990 Baht


คู่มือการใช้งาน

เครื่องทำน้ำร้อน-น้ำเย็น HWD-B30000

ขอขอบคุณสำหรับการสั่งซื้อเครื่องทำน้ำร้อน-น้ำเย็น ฮิตาชิ
โปรดอ่านคู่มือการใช้งานอย่างรอบคอบก่อนที่จะใช้เครื่องทำน้ำร้อน-น้ำเย็น
หลังจากอ่านเสร็จ โปรดเก็บคู่มือนี้ไว้และอ่านอีกครั้งเมื่อจำเป็น

สารบัญ

■ คำเตือนและข้อควรระวังเกี่ยวกับความปลอดภัยและการใช้งาน.....	2
■ ชื่อส่วนประกอบหลัก.....	4
■ วิธีการตั้งค่า.....	4
■ วิธีการทำงาน.....	5
■ วิธีการเปลี่ยนขวดน้ำ.....	6
■ การบำรุงรักษา.....	7
■ การแก้ไขปัญหา.....	7
■ ข้อมูลจำเพาะ.....	9
■ การติดตั้งเครื่องทำน้ำร้อน-น้ำเย็น.....	9

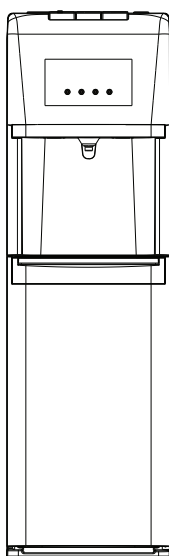

T

- เครื่องทำน้ำร้อน-น้ำเย็นเหมาะสำหรับใช้ในครัวเรือนและการใช้งานในลักษณะที่คล้ายกัน เช่น พื้นที่ห้องครัวสำหรับพนักงานภายในร้านค้า สำนักงาน สภาพแวดล้อมการทำงานอื่น ๆ บ้านไร่และลูกค้าในโรงแรม โมเทล สภาพแวดล้อมที่อยู่อาศัยประเภทอื่นๆ สภาพแวดล้อมประเภทที่พักพร้อมอาหารเช้า การจัดเลี้ยงและการใช้งานที่ไม่ใช่การค้าปลีกในลักษณะที่คล้ายกัน
- กรุณาใช้ผลิตภัณฑ์นี้อย่างถูกต้อง การใช้งานที่ไม่เหมาะสมอาจก่อให้เกิดอุบัติเหตุร้ายแรง
- ในกรณีที่เกิดเหตุฉุกเฉินเช่น ไฟไหม้ หรือแผ่นดินไหว กรุณาหยุดใช้และถอดปลั๊กออกทันที


คำเตือนและข้อควรระวังเกี่ยวกับความปลอดภัยและการใช้งาน

ก่อนใช้ผลิตภัณฑ์นี้ โปรดอ่านคำเตือนและข้อควรระวังเกี่ยวกับความปลอดภัยและการใช้งานเหล่านี้อย่างรอบคอบ เพื่อการใช้งานที่เหมาะสมและป้องกันการบาดเจ็บต่อตัวเองหรือบุคคลอื่น:




คำเตือน:


1. อย่าดัดแปลงผลิตภัณฑ์ ซ่อมแซมหรือถอดแยกชิ้นส่วนด้วยตนเอง
การซ่อมแซมหรือการถอดชิ้นส่วนจะต้องดำเนินการ โดยพนักงานซ่อมที่ได้รับอนุญาตเท่านั้น

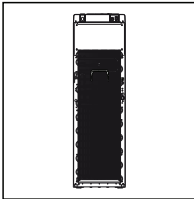

2. วางผลิตภัณฑ์บนพื้นแบนที่มีความแข็งแรงเพียงพอสำหรับรองรับน้ำหนักสูงสุดเมื่อบรรจุน้ำเต็มถึง
3. อย่าหมุนผลิตภัณฑ์ขึ้น-ลงหรือเอียงมากกว่า 45 องศา

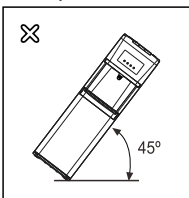

4. ควรตั้งผลิตภัณฑ์ในที่แห้ง วางให้ห่างจากการสัมผัสกับแสงแดดโดยตรงและแหล่งที่มาของความร้อน (เตา เครื่องทำความร้อน หม้อน้ำ อื่นๆ) อย่าวางผลิตภัณฑ์ในพื้นที่ที่อุณหภูมิอาจลดลงต่ำกว่าจุดเยือกแข็ง

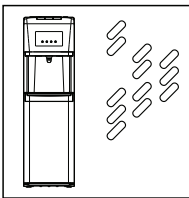


5. ทำให้บริเวณรอบผลิตภัณฑ์ปราศจากฝุ่นและสิ่งสกปรก
6. อย่าวางสิ่งของที่ติดไฟง่ายไว้ข้างผลิตภัณฑ์ และใกล้กับผลิตภัณฑ์ อย่าใช้วัสดุเช่นของเหลวอินทรีย์ซึ่งสร้างก๊าซไวไฟได้
7. อย่าทำความสะอาดผลิตภัณฑ์ด้วยของเหลวไวไฟ
8. ห้ามใช้งานผลิตภัณฑ์หากสายไฟและ/หรือปลั๊กไฟชำรุดหรือหากเต้าเสียบไฟหลวม
ในกรณีที่สายไฟชำรุด สายไฟดังกล่าวจะต้องได้รับการเปลี่ยนโดยผู้ผลิต
ตัวแทนผู้ให้บริการหรือผู้ซึ่งมีคุณสมบัติในการทำงานเดียวกันเพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้น
9. เสียบปลั๊กไฟให้แน่น ทำความสะอาดสิ่งสกปรกและฝุ่นละอองบนปลั๊กไฟอย่างสม่ำเสมอ
10. ในขณะที่ทำความสะอาด จะต้องถอดปลั๊กไฟออกจากเต้าเสียบ อย่าเสียบและถอดปลั๊กไฟในขณะที่มือเปียก
11. อย่าทำให้ผลิตภัณฑ์เปียก การใช้น้ำสาดไปยังอุปกรณ์เป็นสิ่งต้องห้ามอย่างเคร่งครัด
12. ห้ามขึ้นไปบนตัวผลิตภัณฑ์และห้ามวางสิ่งของใดๆ ไว้บนผลิตภัณฑ์
13. ห้ามสอดใส่นิ้วของคุณหรือวัสดุใดๆ เข้าไปในแฉกด้านหลัง
14. หยุดใช้งานทันทีเมื่อคุณพบรอยร้าวหรือรอยแตกบนผลิตภัณฑ์ปรึกษากับร้านค้าที่ท่านซื้อผลิตภัณฑ์
15. เด็กควรได้รับการดูแลเพื่อให้แน่ใจว่าพวกเขาไม่ได้เล่นกับผลิตภัณฑ์
เครื่องทำน้ำร้อน-น้ำเย็นนี้สามารถใช้งานได้กับเด็กอายุตั้งแต่ 8 ปีขึ้นไปได้
หากพวกเขาได้รับการควบคุมดูแลหรือการแนะนำเกี่ยวกับการใช้งานเครื่องทำน้ำร้อน-
น้ำเย็นด้วยวิธีที่ปลอดภัยและหากพวกเขาเข้าใจถึงอันตรายที่เกี่ยวข้อง
การทำความสะอาดและการบำรุงรักษาโดยผู้ใช้จะต้องไม่ดำเนินการโดยเด็ก
ยกเว้นเด็กที่มีอายุมากกว่า 8 ปีและอยู่ภายใต้การควบคุมดูแล
เก็บเครื่องทำน้ำร้อน-น้ำเย็นและสายไฟให้ห่างจากเด็กที่มีอายุน้อยกว่า 8 ปี

16. ผลิตภัณฑ์นี้ไม่เหมาะสำหรับใช้โดยบุคคล (รวมถึงเด็ก) ปัญหาสุขภาพทางร่างกาย ความสามารถทางประสาทสัมผัสหรือจิตใจ หรือขาดประสบการณ์และความรู้ ยกเว้นว่าบุคคลเหล่านั้นได้รับการควบคุมดูแลของคำแนะนำเกี่ยวกับการใช้ผลิตภัณฑ์โดย บุคคลที่มีหน้าที่รับผิดชอบต่อความปลอดภัย
17. ในกรณีที่เกิดน้ำรั่ว กรุณาหยุดใช้งานและถอดปลั๊กของผลิตภัณฑ์ออกทันที
18. อย่าเสียบปลั๊กไฟเข้ากับเต้าเสียบก่อนที่การติดตั้งจะเสร็จสมบูรณ์
19. ผลิตภัณฑ์สามารถผลิตน้ำร้อนที่อุณหภูมิประมาณ 85 องศาเซลเซียส ซึ่งอาจเป็นสาเหตุทำให้เกิดน้ำร้อนลวกอย่างรุนแรงได้ โปรดใช้งานอย่างระมัดระวัง
20. ผลิตภัณฑ์นี้เหมาะสำหรับใช้โดยผู้ใช้ที่มีความเชี่ยวชาญหรือผ่านการฝึกอบรมภายในร้านค้า อุตสาหกรรมเบาและในฟาร์ม หรือสำหรับการใช้ในเชิงพาณิชย์สำหรับบุคคลทั่วไป
21. จะต้องไม่ทำความสะอาดเครื่องทำน้ำร้อน-น้ำเย็นด้วยอุปกรณ์ฉัดน้ำแรงดัน
22. เครื่องทำน้ำร้อน-น้ำเย็นเหมาะสำหรับใช้ในร่มเท่านั้น
23. คำเตือน: ดูแลรักษาช่องระบายอากาศในฝัครอบเครื่องเครื่องทำน้ำร้อน-น้ำเย็นหรือใน โครงสร้างแบบบิวท์อินให้ปราศจากสิ่งกีดขวาง
24. คำเตือน: ห้ามใช้อุปกรณ์เครื่องทางกลหรือวิธีการอื่นๆ เพื่อเร่งกระบวนการละลายน้ำแข็งนอกเหนือจากที่แนะนำโดยผู้ผลิต
25. คำเตือน: ห้ามใช้อุปกรณ์ไฟฟ้าภายในช่องเก็บอาหารของเครื่องทำน้ำร้อน-น้ำเย็น ยกเว้นว่าอุปกรณ์เหล่านั้นเป็นประเภทที่แนะนำโดยผู้ผลิต
26. เครื่องทำน้ำร้อน-น้ำเย็นนี้ไม่เหมาะสมสำหรับการติดตั้งในพื้นที่ที่มีการใช้อุปกรณ์ฉัดน้ำแรงดัน
27. อย่าเก็บสารที่ระเบิดได้เช่นสเปรย์กระป๋อง ที่มีตัวขับเคลื่อนจุลภาคไวไฟไว้ในเครื่องนี้
28. ไม่ควรทำความสะอาดเครื่องโดยการนำไปแช่น้ำ




ข้อควรระวัง :

1. ห้ามสร้างความเสียหาย คัดแปลง ใช้กำลังทำให้งอ ดึงอย่างแรง บิดหรือผูกสายไฟ ห้ามวางของหนักทับสายไฟหรือบีบสายไฟ หรือทำให้สายไฟร้อน
2. ในขณะที่กำลังถอดปลั๊กไฟออก ห้ามจับที่สายไฟ ทำให้แน่ใจว่าได้จับที่ปลั๊กไฟสำหรับดึงออก

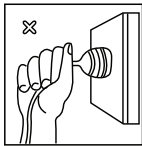

3. ด้านหลังของผลิตภัณฑ์ควรห่างจากผนังอย่างน้อย 25 ซม. ซึ่งจะช่วยให้การไหลเวียนของอากาศเหมาะสมต่อการระบายความร้อนในคอมเพรสเซอร์
4. โปรดระวังขณะที่น้ำร้อนไหลออกมา! ห้ามกदनน้ำร้อนให้ไหลลงปัสสัมผัสกับมือโดยตรง
5. ในกรณีที่ไม่มีน้ำไหลออกมาจากก๊อกน้ำ กรุณาถอดปั๊มไดรฟ์หนึ่งเพื่อให้อากาศซึ่งอยู่ในท่อด้านในให้ออกมา
6. ใช้สำหรับน้ำดื่มเท่านั้น! ห้ามใส่ของเหลวใดๆ เข้าไปในขวดบรรจุน้ำ กรุณาอย่าใช้สำหรับน้ำกระด้างที่ไม่ดีต่อสุขภาพ
7. สำหรับการใช้อย่างปลอดภัยและสะอาด กรุณาปฏิบัติตามดังต่อไปนี้:
 - 1) เปิดน้ำบางส่วนทิ้ง ก่อนที่จะเริ่มดื่มในแต่ละวัน
 - 2) เมื่อคุณไม่ได้ใช้ผลิตภัณฑ์นี้เป็นเวลานาน ตรวจสอบให้แน่ใจว่าไม่มีน้ำหลงเหลืออยู่ในภายในและถอดปลั๊กไฟออก
 - 3) ดูแลรักษาทำความสะอาดผลิตภัณฑ์โดยใช้ผ้าสะอาดเช็ดบริเวณคอกของขวดน้ำและก๊อกน้ำ
 - 4) ใช้น้ำในขวดให้หมดเร็วที่สุดเท่าที่เป็นไปได้เพื่อให้คุณสามารถผลิตเพลินไปกับน้ำจืดที่สดชื่น
8. เมื่อทำการติดตั้งขวดน้ำอันใหม่ คุณจำเป็นต้องเปิดก๊อกน้ำร้อนและปล่อยน้ำทิ้งไม่น้อยกว่า 4 ถ้วยเต็ม
9. ตรวจสอบให้แน่ใจว่าขวดน้ำว่างเปล่าก่อนที่จะเปลี่ยนขวดน้ำใหม่
10. เมื่อใช้ผลิตภัณฑ์หลังจากการติดตั้งหรือเคลื่อนย้าย กรุณาอย่าใช้งานจนกว่าสารทำความเย็นจะมีเสถียรภาพ (โดยทั่วไปจะใช้เวลาประมาณหนึ่งชั่วโมง)
11. ห้ามเปิดสวิตช์ทำน้ำเย็น/น้ำร้อนในกรณีที่ไม่มีน้ำเหลืออยู่ที่ด้านใน (เมื่อทำการติดตั้งขวดน้ำใหม่หรือเมื่อทำความสะอาดที่ด้านใน)
12. มิเช่นนั้นอาจก่อให้เกิดความร้อนแห้งได้ เปิดสวิตช์หลังจากที่เติมน้ำลงในถังจนเต็มแล้วเท่านั้น เมื่อใช้งานผลิตภัณฑ์ กรุณาตรวจสอบให้แน่ใจว่าได้ปิดประตูตู้เรียบร้อยแล้ว

ชื่อส่วนประกอบหลัก

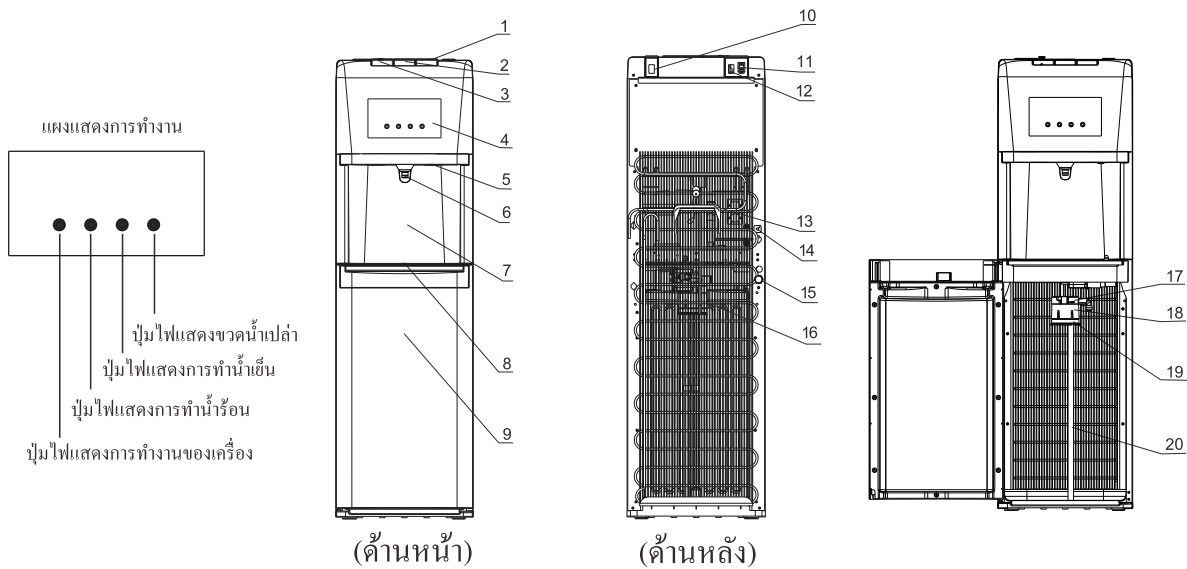

ลำดับ	ชื่อส่วนประกอบ	ลำดับ	ชื่อส่วนประกอบ
1	ปุ่มกดน้ำเย็น	11	สวิตช์ทำความร้อน
2	ปุ่มกดน้ำปกติ	12	สวิตช์ทำความเย็น
3	ปุ่มกดน้ำร้อน	13	มือจับ
4	แผงแสดงการทำงาน	14	สายไฟ
5	ไฟ LED ส่องสว่างสำหรับใช้งานเวลากลางคืน	15	วาล์วระบายน้ำร้อน
6	ก๊อกน้ำ	16	แผงระบายความร้อน
7	ฝาครอบด้านหน้า	17	ตัววัดระดับน้ำ
8	ถาดรองน้ำ	18	ปลอกคอสวมขวน้ำ
9	ประตูเครื่อง	19	ยางรัด
10	สวิตช์เปิด-ปิดไฟ LED ส่องสว่างสำหรับใช้งานเวลากลางวัน	20	ท่อน้ำ

หมายเหตุ:

เครื่องทำน้ำร้อน-น้ำเย็นเหมาะสมสำหรับขนาด 3 หรือ 5 แกลลอน กรุณาซื้อขนาดที่ตลาดใกล้บ้านคุณ
* ห้ามใช้น้ำสกปรกหรือน้ำกระด้าง

วิธีการติดตั้ง

1. การติดตั้งผลิตภัณฑ์

- 1) ถอดบรรจุภัณฑ์ทั้งภายนอกและภายในออก
- 2) วางผลิตภัณฑ์บนพื้นแบนที่มีความแข็งแรงเพียงพอสำหรับรองรับน้ำหนักสูงสุดเมื่อบรรจุน้ำเต็มถึง
- 3) เครื่องทำน้ำร้อน-น้ำเย็นควรทำงานภายใต้สภาพแวดล้อมที่มีอุณหภูมิ 18°C~43°C และค่าความชื้นสัมพัทธ์ไม่เกิน 90%

คำแนะนำ:

- 1) อย่าคว่ำผลิตภัณฑ์หรือเอียงมากกว่า 45 องศา
- 2) ควรตั้งผลิตภัณฑ์ในที่แห้ง

วางให้ห่างจากการสัมผัสกับแสงแดดโดยตรงและแหล่งที่มาของความร้อน (เตา เครื่องทำความร้อน หม้อน้ำ อื่นๆ) อย่าวางผลิตภัณฑ์ในพื้นที่ที่อุณหภูมิอาจลดลงต่ำกว่าจุดเยือกแข็ง

ข้อควรระวัง :

ด้านหลังของผลิตภัณฑ์ควรห่างจากผนังอย่างน้อย 25 ซม.

ซึ่งจะช่วยให้การไหลเวียนของอากาศเหมาะสมต่อการระบายความร้อนในคอมเพรสเซอร์

2. การติดตั้งขวดบรรจุน้ำ

เครื่องทำน้ำร้อน-น้ำเย็นเหมาะสมสำหรับขวดน้ำที่มีขนาด 3 หรือ 5 แกลลอน

กรุณาซื้อขวดน้ำที่ตลาดใกล้บ้านคุณ *ห้ามใช้น้ำสกปรกหรือน้ำกระด้าง

- 1) วางขวดน้ำใหม่ไว้ที่นอกตู้
- 2) ทำความสะอาดด้านนอกของขวดน้ำด้วยผ้าสะอาด
- 3) ถอดฝาพลาสติกทั้งหมดออกจากด้านบนของขวดน้ำ
- 4) เปิดประตูดู้
- 5) ใส่อุปกรณ์ตรวจสอบลงในขวดน้ำ
- 6) เลื่อนยางรัดขึ้น
- 7) เลื่อนปลอกขวดลงจนกระทั่งเข้าที่และเกิดเสียงดังกริ๊ก
- 8) เลื่อนยางรัดลงเพื่อรัดปลอกขวดให้แน่น
- 9) กดหัวขวดลงจนกระทั่งท่อแต่ละท่อนที่ด้านล่างของขวดน้ำ
- 10) วางขวดน้ำให้อยู่ในตู้และปิดประตูดู้



ข้อควรระวัง :

- 1) ห้ามทำให้ท่อและสายซิลิโคนบิดงอหรือเสียหาย
- 2) ตรวจสอบให้แน่ใจว่าได้ปิดประตูดู้เรียบร้อยแล้ว

วิธีการทำงาน

1. การจัดหาไฟฟ้า

- 1) เสียบปลั๊กไฟกับเต้าเสียบไฟ ปุ่มไฟแต่ละปุ่มจะกะพริบจากซ้ายไปขวาเพื่อตรวจสอบให้แน่ใจว่าปุ่มไฟแต่ละปุ่มทำงานเป็นปกติ
- 2) หลังจากตรวจสอบการทำงานแล้ว ปุ่มไฟแสดงการทำงานจะสว่างขึ้นในขณะที่ปุ่มไฟแสดงขวดน้ำเปล่าก็จะสว่างขึ้นเช่นกัน
- 3) ป้อนน้ำจะเริ่มถ่ายเทจากขวดน้ำไปยังถังทำน้ำร้อนและน้ำเย็น ในครั้งแรกจะใช้เวลาประมาณ 4 นาทีในการเติมน้ำให้เต็มทั้งสองถัง ระหว่างนี้ ป้อนน้ำจะทำงานอย่างต่อเนื่องซึ่งถือเป็นเรื่องปกติ
- 4) หลังจากเติมน้ำเต็มแล้ว ปุ่มไฟแสดงขวดน้ำเปล่าจะดับเองโดยอัตโนมัติ

2. การทำน้ำร้อนและน้ำเย็น

- 1) เปิดสวิตช์ทำความเย็น (สีเขียว) ที่อยู่ด้านข้างสำหรับน้ำเย็น เปิดสวิตช์ทำความร้อน (สีแดง) ที่อยู่ด้านข้างสำหรับน้ำร้อน ระหว่างการทำความร้อนหรือทำความเย็น ไฟแสดงการทำงาน (สีเขียว) หรือไฟแสดงการทำงานร้อน (สีแดง) จะสว่างขึ้น
- 2) รอให้น้ำเย็นถึงอุณหภูมิที่กำหนดในเวลาประมาณ 1 ชั่วโมง
รอให้น้ำร้อนถึงอุณหภูมิที่กำหนดในเวลาประมาณ 20 นาที หลังจากน้ำถึงอุณหภูมิที่กำหนด ไฟแสดงการทำงาน หรือไฟแสดงการทำงานร้อนจะดับโดยอัตโนมัติ

ข้อควรระวัง :

ห้ามเปิดสวิตช์ทำน้ำเย็น/น้ำร้อนในกรณีที่ไม่มีน้ำเหลืออยู่ที่ด้านใน

(เมื่อทำการติดตั้งขวดน้ำใหม่หรือเมื่อทำความสะอาดที่ด้านใน)

มิเช่นนั้นอาจก่อให้เกิดความร้อนแห้งได้ เปิดสวิตช์หลังจากที่เติมน้ำลงในถังจนเต็มแล้วเท่านั้น

หมายเหตุ :

- 1) ระหว่างที่เครื่องกำลังทำความเย็น คุณอาจได้ยินเสียงดัง เสียงนี้เป็นเสียงการเคลื่อนที่ของสารทำความเย็นซึ่งเป็นเสียงปกติ
- 2) ระหว่างที่ปั้มน้ำทำงาน คุณอาจจะได้ยินเสียงดังซึ่งถือเป็นเรื่องปกติ
- 3) หากมีการบริโภคน้ำมากเกินไปในระยะเวลาอันสั้น อุณหภูมิของน้ำร้อนและน้ำเย็นอาจจะไม่ถึงอุณหภูมิที่เหมาะสม
- 4) เมื่ออุณหภูมิของน้ำไม่เหมาะสม ไฟแสดงการทำความเย็นและความร้อนจะสว่างขึ้นอีกครั้งโดยอัตโนมัติเพื่อทำน้ำร้อนและน้ำเย็น
- 5) อุณหภูมิของน้ำและความสามารถ
อุณหภูมิของน้ำร้อน: ประมาณ 85°C (อุณหภูมิของน้ำเมื่อออกมาจากก๊อกน้ำ)
ความสามารถในการทำน้ำร้อน: 4 ลิตรต่อชั่วโมง ($\geq 85^{\circ}\text{C}$ สามารถมีน้ำได้จำนวน 4 ลิตรต่อชั่วโมง)
อุณหภูมิของน้ำเย็น: ประมาณ 10°C (อุณหภูมิของน้ำเมื่อออกมาจากก๊อกน้ำ)
ความสามารถในการทำน้ำเย็น: 2 ลิตรต่อชั่วโมง ($\leq 10^{\circ}\text{C}$ สามารถมีน้ำได้จำนวน 2 ลิตรต่อชั่วโมง)
- 6) อุณหภูมิของน้ำจะขึ้นอยู่กับสภาพของการวัดค่าและการใช้งาน
- 7) เวลาที่ใช้ในการขึ้นถึงอุณหภูมิที่เหมาะสมเป็นเพียงแค่การอ้างอิงเท่านั้น
ทั้งนี้เวลาดังกล่าวสามารถเปลี่ยนแปลงไปได้ตามน้ำที่อยู่ในขวดน้ำหรืออุณหภูมิห้อง

3. น้ำดื่ม

ถือแก้วน้ำไว้ที่ใดก๊อกน้ำ เลื่อนสไลด์เพื่อความปลอดภัยของเด็กขึ้นจากนั้นกดปุ่มน้ำร้อนหากคุณต้องการน้ำร้อน
กดปุ่มน้ำเย็นหรือน้ำธรรมดาหากคุณต้องการน้ำเย็นหรือน้ำธรรมดา

คำเตือน :

ผลิตภัณฑ์นี้สามารถผลิตน้ำร้อนที่อุณหภูมิประมาณ 85 องศาเซลเซียส
ซึ่งอาจเป็นสาเหตุทำให้เกิดน้ำร้อนลวกอย่างรุนแรงได้ โปรดใช้งานอย่างระมัดระวัง

ข้อควรระวัง:

- 1) ในกรณีที่ไม่มีน้ำไหลออกมาจากก๊อกน้ำ กรุณากดปุ่มใดปุ่มหนึ่งเพื่อไล่อากาศซึ่งอยู่ในท่อด้านในให้ออกมา
- 2) ในกรณีที่ไม่ต้องการใช้งานน้ำร้อนหรือน้ำเย็นเป็นเวลานาน กรุณาปิดสวิตช์ทำความร้อนหรือทำความเย็นเพื่อประหยัดพลังงาน
- 3) ในกรณีที่ คุณจะ ไม่ใช้งานผลิตภัณฑ์เป็นเวลานาน กรุณาปิดสวิตช์และดึงปลั๊กไฟออกจากเต้าเสียบไฟและระบายน้ำที่เหลือผ่านโดยใช้วาล์วระบายน้ำร้อน
- 4) ผลิตภัณฑ์นี้ไม่ควรเปิดอีกครั้งจนกว่าเวลาผ่านไป 3 นาทีหลังจากปิดสวิตช์ไฟ
- 5) เมื่อผลิตภัณฑ์นี้ภายใต้จุดน้ำแข็งและถูกอุดด้วยน้ำแข็ง สวิตช์ทำความเย็นจะต้องถูกปิดเป็นเวลา 4 ชั่วโมง ก่อนที่จะเปิดใหม่อีกครั้งเพื่อให้เครื่องทำน้ำร้อน-น้ำเย็นทำงานต่อ
- 6) อุณหภูมิจะถูกตั้งมาจากโรงงาน กรุณาอย่าพยายามที่จะเปลี่ยนแปลงการตั้งค่าอุณหภูมิด้วยตัวเอง

4. ไฟ LED สำหรับเวลากลางคืน

เปิดสวิตช์ไฟ LED สำหรับเวลากลางคืนหากต้องการใช้งาน

วิธีการเปลี่ยนขวดน้ำ

เมื่อปุ่มไฟแสดงน้ำหมดวางขึ้นหรือเมื่อไม่มีน้ำไหลออกมาจากก๊อกน้ำ กรุณาเปลี่ยนขวดน้ำโดยเร็วที่สุดเท่าที่จะเป็นไปได้

- 1) วางขวดน้ำใหม่ไว้ที่นอกตู้
- 2) ทำความสะอาดด้านนอกของขวดน้ำด้วยผ้าสะอาด
- 3) ถอดฝาพลาสติกทั้งหมดออกจากด้านบนของขวดน้ำ
- 4) เปิดประตูตู้
- 5) นำขวดน้ำเปล่าออกมาจากตู้
- 6) นำอุปกรณ์ตรวจสอบออกจากขวดน้ำเปล่าและใส่อุปกรณ์ตรวจสอบดังกล่าวลงในขวดน้ำขวดใหม่
- 7) เลื่อนยางรัดขึ้น
- 8) เลื่อนปลอกขวดลงจนกระทั่งเข้าที่และเกิดเสียงดังกริก
- 9) เลื่อนยางรัดลงเพื่อรัดปลอกขวดให้แน่น
- 10) กดหัวขวดลงจนกระทั่งท่อแต่ละท่อนที่ด้านล่างของขวดน้ำ
- 11) วางขวดน้ำให้อยู่ในตู้และปิดประตูตู้
- 12) ตรวจสอบให้แน่ใจว่าปุ่มไฟแสดงน้ำหมดดับลงแล้ว

ข้อควรระวัง :

- 1) ห้ามกดจ่ายน้ำร้อน น้ำธรรมดาหรือน้ำเย็นหากปั๊มไฟแสดงขวดน้ำเปล่ายังคงสว่างอยู่เนื่องจากการทำเช่นนั้นอาจทำให้ถึงน้ำว่างเปล่าและอาจทำให้เครื่องจ่ายน้ำร้อนเกินไปได้
- 2) ห้ามทำให้ท่อและสายซิลิโคนบิดงอหรือเสียหาย
- 3) ตรวจสอบให้แน่ใจว่าได้ปิดประตูตู้เรียบร้อยแล้ว หากประตูยังคงเปิดอยู่ อาจทำให้เกิดเสียงดังหรือปั๊มไฟแสดงขวดน้ำเปล่าจะกะพริบไม่หยุดและปั๊มน้ำไม่ทำงานได้

การบำรุงรักษา

1. ใช้ผ้าสะอาดและอ่อนนุ่มเช็ดบริเวณรอบขอบขวดและก๊อกน้ำ อย่าทำให้ผลิตภัณฑ์เปียก การใช้น้ำสาดไปยังอุปกรณ์เป็นสิ่งต้องห้ามอย่างเคร่งครัด
2. หากถาดรองน้ำหยดเต็มแล้ว กรุณาเทน้ำในถาดทิ้ง
3. ผลิตภัณฑ์นี้ได้รับการฆ่าเชื้อที่โรงงานแล้ว เพื่อให้ผลิตภัณฑ์ของคุณมีคุณภาพสูงสุด บริษัทแนะนำให้ลูกค้าติดต่อผู้ขายซึ่งคุณซื้อผลิตภัณฑ์หรือบริษัทผู้ให้บริการหากคุณต้องการการบำรุงรักษาเพิ่มเติม

คำเตือน :

ห้ามถอดแยกชิ้นส่วนของผลิตภัณฑ์ด้วยตัวคุณเองเพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้นเกิดจากผลิตภัณฑ์ที่ชำรุดเสียหาย

การแก้ไขปัญหา

เมื่อคุณคิดว่าคุณมีปัญหาเกี่ยวกับเครื่องทำน้ำร้อน-น้ำเย็นของคุณ

ปัญหา	สาเหตุที่เป็นไปได้	วิธีการแก้ปัญหา
น้ำไม่ร้อนหรือไม่เย็น	1. ปริมาณน้ำมากเกินไปในระยะเวลาอันสั้น 2. ปลั๊กไฟไม่ติด 3. มีอากาศหลงเหลืออยู่ภายในท่อด้านใน 4. ท่อส่งน้ำไม่มีน้ำ 5. น้ำแข็งอุดตัน 6. ไม่สามารถกดปุ่มได้ 7. ไม่มีน้ำเหลืออยู่ที่ด้านในของถังน้ำ (ปั๊มไฟแสดงน้ำหมดกะพริบ)	1. รอให้เครื่องทำงานสักครู่หนึ่ง หลังจากนั้นน้ำร้อนและน้ำเย็นจะใช้งานได้อีกครั้ง 2. เชื่อมต่อปลั๊กไฟไปยังเต้าเสียบ เปิดปิดสวิตช์ทำความเย็นและสวิตช์ทำความร้อน 3. กดปุ่มใดปุ่มหนึ่งเพื่อไล่อากาศซึ่งอยู่ในท่อด้านในให้ออกมา 4. ตรวจสอบน้ำในบริเวณดังกล่าวเพื่อดูว่าอุปกรณ์ส่งน้ำทำงานปกติหรือไม่ 5. ปิดสวิตช์ทำน้ำเย็นเป็นเวลา 4 ชั่วโมง 6. กดปุ่มอย่างเหมาะสม 7. เปลี่ยนเป็นขวดน้ำใหม่และรอจนกระทั่งปั๊มไฟแสดงน้ำหมดดับลง

น้ำร้อนไม่ร้อน น้ำเย็นไม่เย็น	1. เวลาที่ใช้ในการทำความร้อน/ความเย็นไม่มากพอ 2. การไหลเวียนของอากาศไม่ดี (เฉพาะน้ำเย็นเท่านั้น)	1. ใช้เวลาประมาณ 20 นาทีสำหรับน้ำร้อน/ประมาณหนึ่งชั่วโมงสำหรับน้ำเย็น หลังจากนี้น้ำอยู่ในอุณหภูมิที่เหมาะสมแล้ว ปั๊มไฟจะดับลงเองโดยอัตโนมัติ จากนั้นคุณจึงค่อยกดน้ำ 2. ด้านหลังของผลิตภัณฑ์ควรตั้งอยู่ห่างจากผนังอย่างน้อย 25 ซม.
น้ำไม่ค่อไหลออกจากก๊อกน้ำ	1. มีน้ำเหลืออยู่ที่ด้านในของถังไม่มากพอ 2. ก๊อกน้ำที่แตก	1. เปลี่ยนเป็นขวดน้ำใหม่และรอนกระทั้งปั๊มไฟแสดงขวดน้ำเปล่าดับลง 2. ติดต่อร้านค้าที่ท่านซื้อผลิตภัณฑ์ เพื่อเปลี่ยนก๊อกน้ำใหม่
น้ำรั่ว	ก๊อกน้ำที่แตก	ติดต่อร้านค้าที่ท่านซื้อผลิตภัณฑ์ เพื่อเปลี่ยนก๊อกน้ำใหม่
การทำงานที่มีเสียงดัง	1. ไม่ได้ถูกติดตั้งอย่างเหมาะสม 2. ประตูยังคงเปิดอยู่ 3. ระหว่างที่เครื่องกำลังทำความเย็น คุณอาจได้ยินเสียงดัง เสียงนี้เป็นเสียงการเคลื่อนที่ของสารทำความเย็นซึ่งเป็นเสียงปกติ	1. วางผลิตภัณฑ์บนพื้นผิวที่เรียบและแข็ง 2. ตรวจสอบให้แน่ใจว่าได้ปิดประตูตู้เรียบร้อยแล้ว
ปั๊มไฟแสดงขวดน้ำเปล่ากะพริบไม่หยุด	ขวดน้ำว่างเปล่า	เปลี่ยนเป็นขวดน้ำใหม่
ปั๊มไฟแสดงการทำน้ำร้อน/น้ำเย็นไม่สว่าง	1. อุณหภูมิของน้ำเหมาะสมแล้ว 2. สวิตซ์การทำน้ำร้อน/น้ำเย็นปิดอยู่	1. ผลิตภัณฑ์พร้อมสำหรับการใช้งาน 2. เปิดสวิตซ์การทำน้ำร้อน/น้ำเย็น
ไฟ LED สำหรับเวลากลางคืนไม่สว่าง	1. ไม่มีไฟฟ้า 2. สวิตซ์ไฟ LED สำหรับเวลากลางคืนปิดอยู่	1. เสียบปลั๊กกับเต้าเสียบไฟ 2. ตรวจสอบให้แน่ใจว่าเปิดสวิตซ์ไฟ LED สำหรับเวลากลางคืนแล้ว
วัตถุสีขาวหรือสีดำอาจออกมาพร้อมกับน้ำจากก๊อกน้ำ	วัตถุดังกล่าวเป็นแร่ธาตุ เช่น Ca, Na, Mg รวมถึงในขวดน้ำด้วย	หากดื่มวัตถุเหล่านั้นเข้าไป จะไม่เป็นอันตรายต่อสุขภาพของมนุษย์ แต่จะดีกว่าหากทำความสะอาดอย่างสม่ำเสมอ ตามหน้า 7 การบำรุงรักษา

คำเตือน:

1. หากปัญหายังคงมีอยู่

กรุณาติดต่อร้านค้าปลีกจากที่คุณซื้อผลิตภัณฑ์หรือบริษัทที่ให้บริการโดยไม่พยายามที่จะซ่อมแซมด้วยตนเอง

2. ห้ามถอดแยกชิ้นส่วนผลิตภัณฑ์ด้วยตนเองเพื่อหลีกเลี่ยงอันตรายจากผลิตภัณฑ์ที่เสียหาย

ข้อมูลจำเพาะ



แรงดันที่กำหนด	220V-240V~
ความถี่ที่กำหนด	50Hz/60Hz
กำลังไฟฟ้าที่กำหนด	520W
พลังงานทำความร้อน	420W
กระแสไฟฟ้าทำความเย็น	1.0A
สารทำความเย็น	R134a (32g)
อุณหภูมิน้ำร้อน	$\geq 85^{\circ}\text{C}$ (อุณหภูมิของน้ำเมื่อออกมาจากก๊อกน้ำ)
ความสามารถในการทำความร้อน	4 ลิตรต่อชั่วโมง ($\geq 85^{\circ}\text{C}$ สามารถมีน้ำได้จำนวน 4 ลิตรต่อชั่วโมง)
อุณหภูมิน้ำเย็น	$\leq 10^{\circ}\text{C}$ (อุณหภูมิของน้ำเมื่อออกมาจากก๊อกน้ำ)
ความสามารถในการทำความเย็น	2 ลิตรต่อชั่วโมง ($\leq 10^{\circ}\text{C}$ สามารถมีน้ำได้จำนวน 2 ลิตรต่อชั่วโมง)
ขนาดบรรจุภัณฑ์ที่เหมาะสม	3 หรือ 5 แกลลอน ※กรองน้ำดื่มเท่านั้น
สภาพแวดล้อมการทำงาน	อุณหภูมิ: $18^{\circ}\text{C}\sim 43^{\circ}\text{C}$ ความชื้นสัมพัทธ์: $\leq 90\%$ ระดับสภาพอากาศ T
คำแนะนำการเปลี่ยนสายไฟ	การประกอบแบบ Y
ขนาด (กxขxส)	310x360x1040 มม.
น้ำหนัก	16.2 กก.
อุปกรณ์เสริม	อุปกรณ์ยึด

การติดตั้งเครื่องทำน้ำร้อน-น้ำเย็น

เพื่อป้องกันไม่ให้เครื่องโคลงเคลงไปมาจนอาจจะล้ม กรุณาติดตั้งอุปกรณ์ยึดเพื่อความปลอดภัย

คำแนะนำสำหรับการติดตั้ง:

1. คลายสกรูมุมซ้ายหรือขวาตรงมุมด้านล่างตามภาพที่แสดง
2. ใช้สกรูยึดตัวยึดบนมุมซ้ายหรือขวาตรงมุมด้านล่างของเครื่องทำน้ำร้อน-น้ำเย็น
3. ทำให้พื้น (หรือโต๊ะ) ให้เป็นหลุม ซึ่งเป็นตำแหน่งที่จะทำการติดตั้งเครื่องทำน้ำร้อน-น้ำเย็นและวางปลอกลงไปบนหลุม
4. ยึดตัวยึดบนพื้นให้แน่นด้วยสกรู
5. ขันเกลียวสกรู

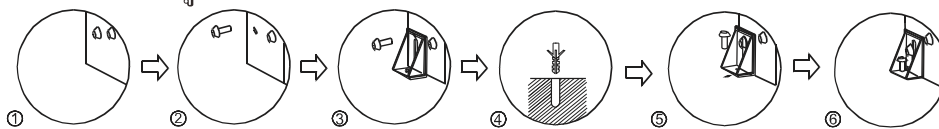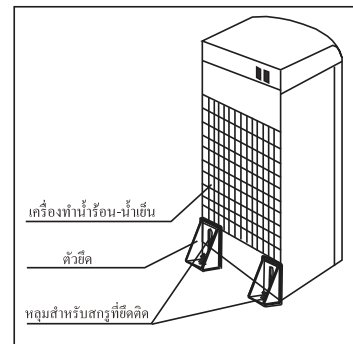

คำเตือน! เพื่อหลีกเลี่ยงอันตรายเนื่องจากความไม่แน่นอนของเครื่องใช้ไฟฟ้า จะต้องได้รับการแก้ไขตามคำแนะนำ

วัสดุบรรจุภัณฑ์ที่ใช้เป็นแบบนำกลับมาใช้ใหม่ได้ เราขอแนะนำให้แยกพลาสติก กระดาษ และกระดาษแข็งออกจากกัน และนำไปให้บริษัทรีไซเคิล เพื่อช่วยรักษาสีสิ่งแวดล้อม

สารทำความเย็นที่ใช้ในผลิตภัณฑ์นี้เป็นสารทำความเย็น R134a (ไฮโดรฟลูออโรคาร์บอน -HFC) ซึ่งไม่ส่งผลกระทบต่อชั้นโอโซนและมีผลกระทบต่อภาวะเรือนกระจกเพียงเล็กน้อย ตามแนวทางปฏิบัติ WEEE (ระบุไว้ว่าด้วยเศษเหลือทิ้งของผลิตภัณฑ์ไฟฟ้าและอิเล็กทรอนิกส์)

ขยะจากอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ควรเก็บแยกต่างหาก หากคุณต้องการทิ้งเครื่องนี้ในอนาคต ห้ามโยนทิ้งปะปนกับส่วนที่เหลือของขยะในประเทศของคุณ กรุณานำเครื่องไปที่จุดรวบรวม WEEE ที่ใกล้ที่สุด ที่มีให้บริการ



ตัวแทนจำหน่าย : บริษัท อาร์เซลิก ฮิตาชิ โฮม แอพพลายแอนซ์ เซลส์ (ประเทศไทย) จำกัด
เลขที่ 333, 333/1-8 หมู่ 13 ถนนบางนา-ตราด ก.ม.7
ตำบลบางแก้ว อำเภอบางพลี จังหวัดสมุทรปราการ 10540
โทร. 0-2335-5455 โทรสาร: 0-2316-1126, 0-2316-1127
Website : (Thai) <https://www.hitachi-homeappliances.com/th-th/>
(Eng) <https://www.hitachi-homeappliances.com/th-eng/>
Email : service.h.ahst@arcelik-hitachi.com
LINE : @AH_THCARE

ราคาขายปลีกรุ่น : HWD-B30000 7,990 บาท